 
 



Flying Banner - Assembly & Installation Guide




Kit overview - Your Flying Banner (feather or teardrop) flag kit comprises a 2, 3 or 4 piece pole in a Carry Bag & depending on what you have ordered, a Cross Base (with or without Waterbag) &/or a Spike Base. The Carry Bag has enough compartments/space to store these components & your flag when not in use.


Assembling the Flag.

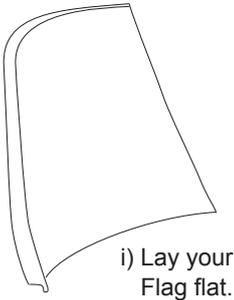

i) Lay your Flag flat.

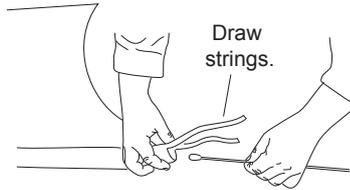


ii) Insert the thinnest Pole section protected end first into the Flag sleeve.

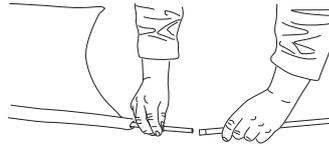


iii) Continue joining subsequent thickness Pole sections until the protected end of the Pole has reached the end of the Flag sleeve at the top of the Flag.


iv) Tension the draw strings until the best result for the Banner is achieved. It is advisable to tie a reef knot as shown.

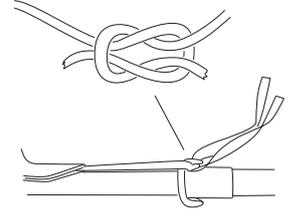



Assembling the Cross Base. (For hard standing indoors or out).

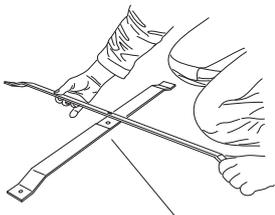

i) Ensure the notched bar Cross Base is underneath.

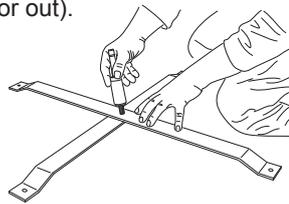


ii) Screw the two bars together using the Spigot.

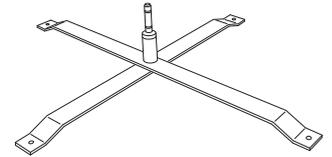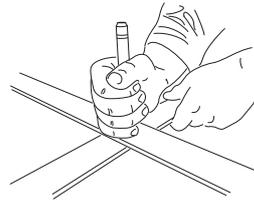


iii) Base shown assembled for indoor use. (The holes in the feet allow pegging into soft ground outdoors - pegs not included).


Using the Waterbag. Optional for outdoor use.

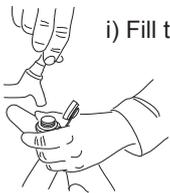



i) Fill the Waterbag.

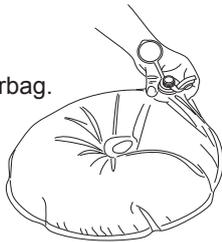


ii) Tighten the cap.

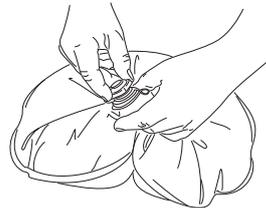


iii) Place onto the Cross Base.

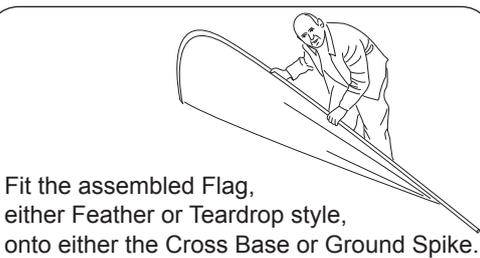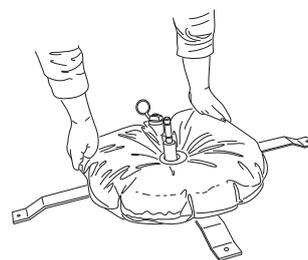

Fit the assembled Flag, either Feather or Teardrop style, onto either the Cross Base or Ground Spike.

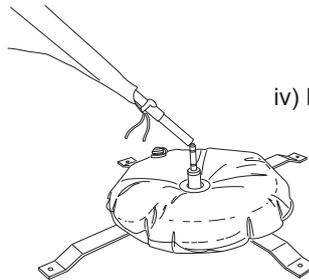

iv) Fit the Flag.

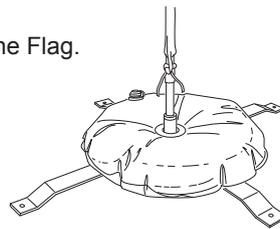

Typical Assembly

Feather Flag.

Waterbag.


Cross Base.



Teardrop Flag.


Waterbag.

Cross Base.

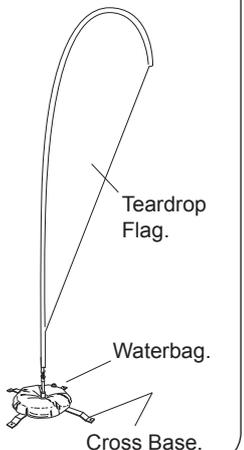


Using the Ground Spike.


For use in soft ground, sand or snow.

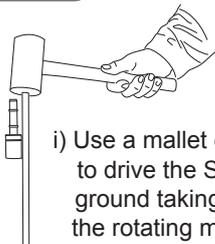

i) Use a mallet or lump hammer to drive the Spike fully into the ground taking care not to hit the rotating male Pole connector.

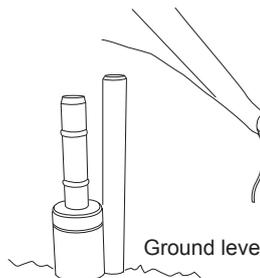



ii) Fit the Flag.

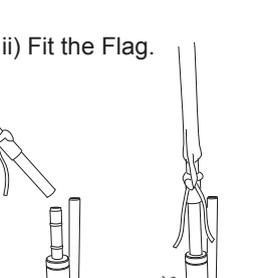


WE DO NOT RECOMMEND USE OF OUR FLYING BANNERS IN WINDS IN EXCESS OF 25 M.P.H.

Removing the Pole from the Flag.

 i) Unhook/untie the draw strings.

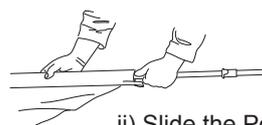

ii) Slide the Poles out.

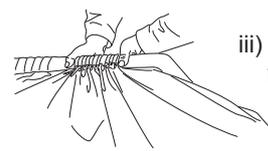

iii) If the Poles separate, feed the Flag along to remove them.